


INTRODUCING

RAPID **BRACKET**®

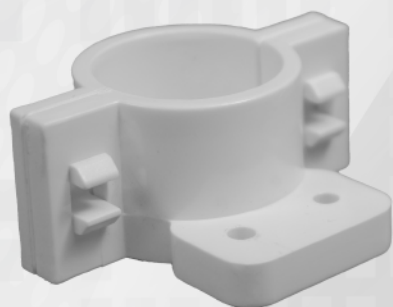



Tool-Free Convenience

Cost-Effective Solution

Flexible Configurations

Lightweight and Portable


Enhanced Compatibility

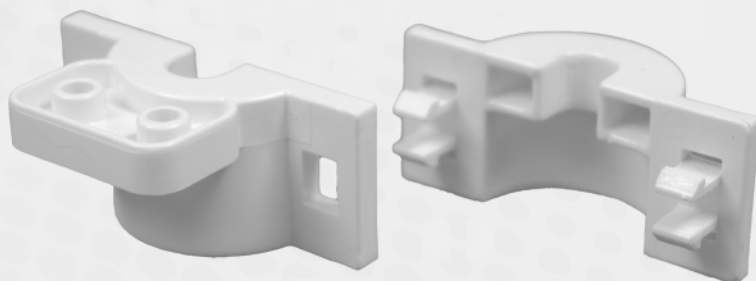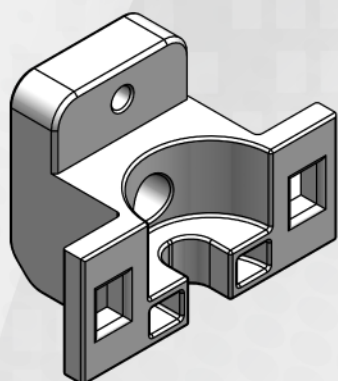



Experience the ease and efficiency of our innovative male and female coupling design, making assembly a breeze. No more fumbling with tools - our brackets offer tool-free installation, saving you time and money. Create custom configurations effortlessly, and rest easy knowing your lamps are securely connected. With quick disassembly, maintenance and repairs are a breeze, reducing downtime and maximizing productivity.

POLYCARBONATE MATERIAL

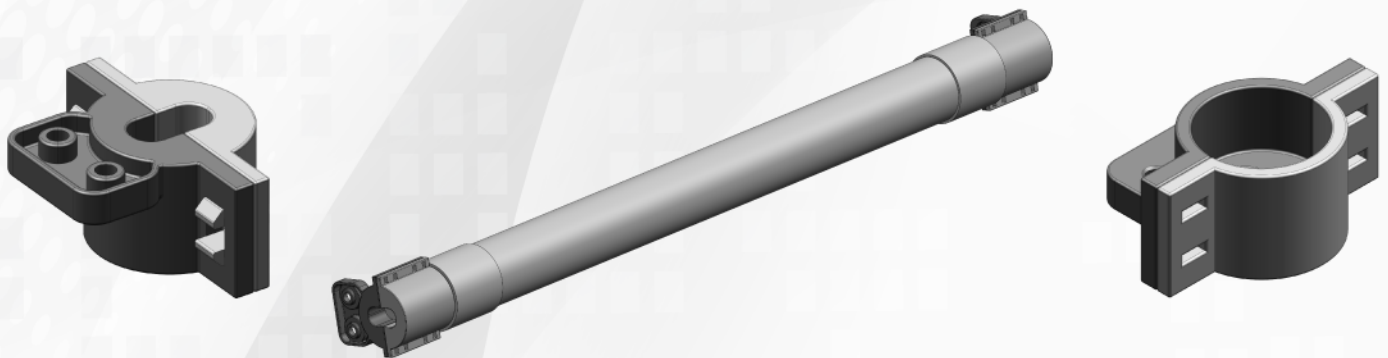


MODEL NAME	SIZE	WATTAGE	LUMENS	CCT	LENSE	CLEARANCE NEED TO USE RAPID BRACKET IN CABINET
2SL07T10XX0450	F18	7W	910lm	6000K	CLEAR	16 1/4"
2SL13T10XX0600	F24	13W	1560lm	6000K	CLEAR	22 1/4"
2SL13T10XX0750	F30	13W	1690lm	6000K	CLEAR	28 1/4"
2SL16T10XX0900	F36	16W	2080lm	6000K	CLEAR	34 1/4"
2SL21T10XX1050	F42	21W	2700lm	6000K	CLEAR	40 1/4"
2SL21T10XX1200	F48	21W	2730lm	6000K	CLEAR	46 1/4"
2SL28T10XX1500	F60	28W	3640lm	6000K	CLEAR	58 1/4"
2SL28T10XX1600	F64	28W	3640lm	6000K	CLEAR	62 1/4"
2SL38T10XX1800	F72	38W	4750lm	6000K	CLEAR	70 1/4"
2SL38T10XX2100	F84	38W	4750lm	6000K	CLEAR	82 1/4"
2SL51T10XX2475	F96	51W	6630lm	6000K	CLEAR	94 1/4"
2SL51T10XX2700	F108	51W	6630lm	6000K	CLEAR	106 1/8"
2SL60T10XX2925	F117	60W	8450lm	6000K	CLEAR	115 1/8"
2SL60T10XX3000	F120	60W	8450lm	6000K	CLEAR	118 1/8"




DIMENSIONS

SIDE MOUNT

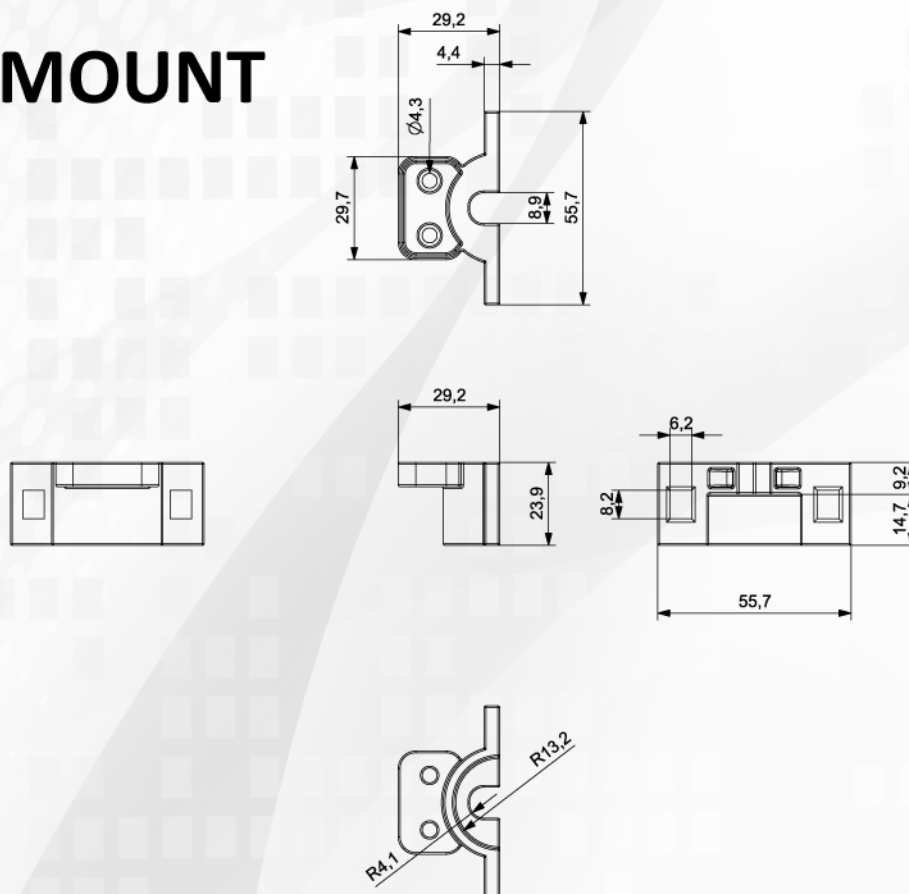


BACK MOUNT

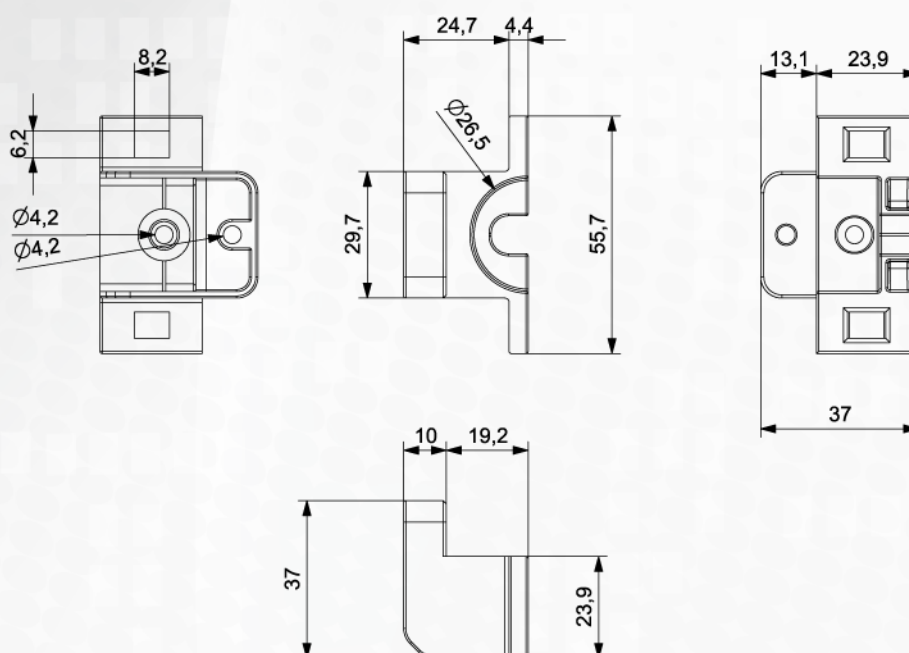


DIMENSIONS

TOP COVER

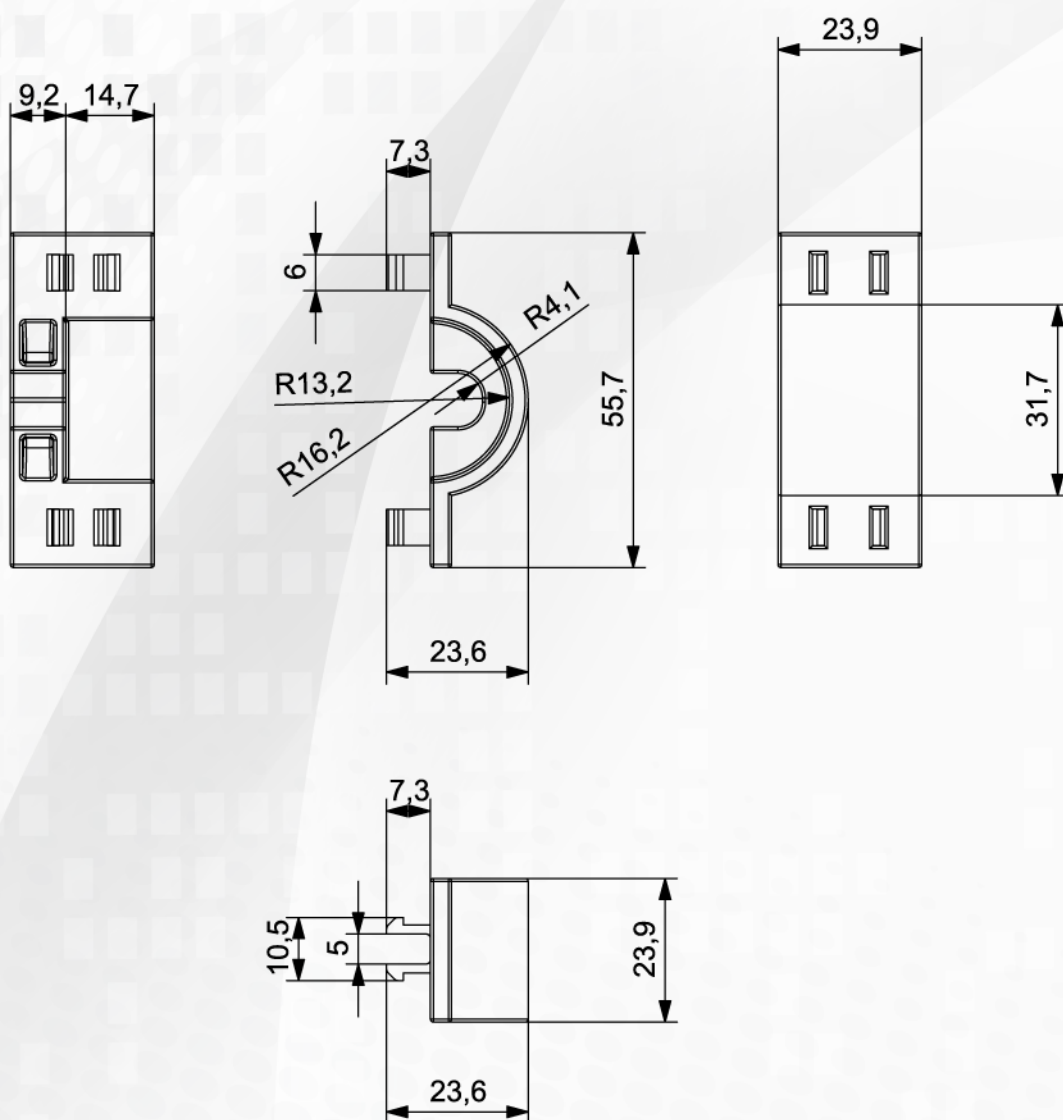

INSTALLATION GUIDE


STEP 1 : PLACEMENT

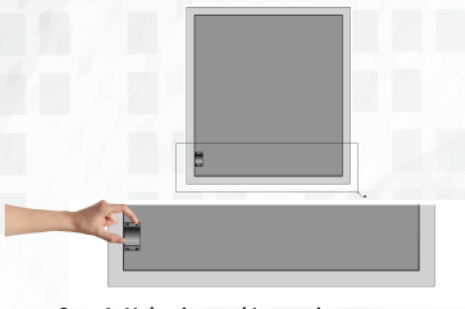

Step 1: Unboxing and Inspection

1. Open the package containing the Rapid Brackets and Rapid Lamps.
2. Carefully inspect the contents to ensure that all components are included and undamaged.


STEP 2.1 : COMBINED

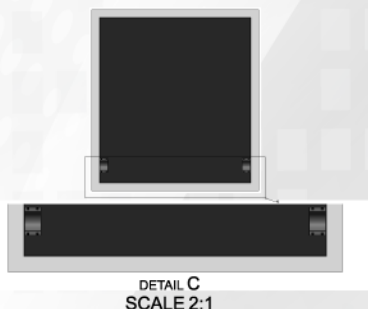

Step 2: Preparing for Installation

2. Ensure that the sign tube or cabinet surface is clean and free from any dirt, dust, or debris that might hinder the installation.

STEP 3.1 : BOLTING ASM

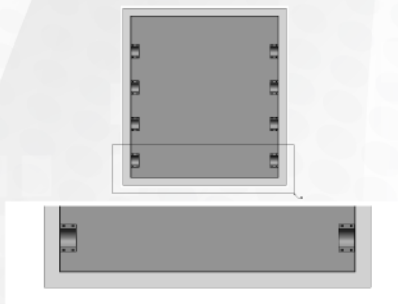

Step 3: Male-Female Bracket Installation on Sign Tube

2. Align the male part with the female part of the bracket on the sign tube.


STEP 2 : BOLTING



Step 2: Preparing for Installation

1. Identify the desired location for installing the Rapid Lamps. Make sure it is suitable for the lamp's purpose and provides easy access to the sign tube or cabinet.


STEP 3 : BOLTING BOLTS VISIBLE

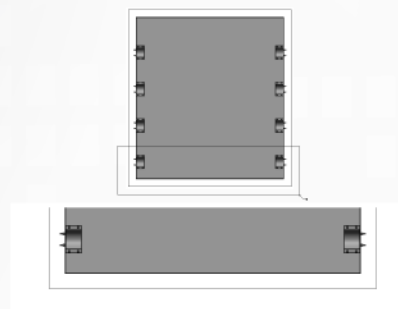

Step 3: Male-Female Bracket Installation on Sign Tube

1. Hold the male part of the Rapid Bracket in your hand.

STEP 3.2 : BOLTING

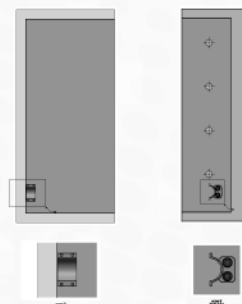


Step 3: Male-Female Bracket Installation on Sign Tube

3. Gently push the male and female parts together until they click into place securely. The brackets are designed for a snug fit without requiring any tools.




STEP 4 : PLACEMENT

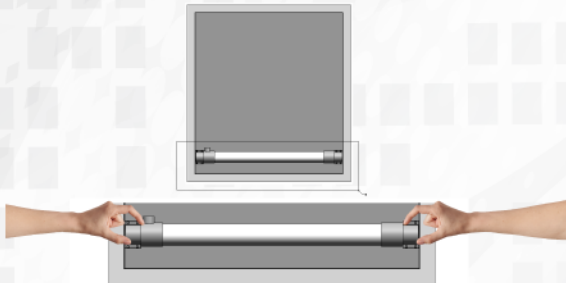

Step 4: Installing Rapid Lamp on the Bracket

1. Hold the Rapid Lamp in your hand, ensuring you are holding it at the correct angle to match the male-female bracket configuration.
2. Slide the lamp's corresponding female bracket onto the male bracket that's already attached to the sign tube. The lamp should smoothly slide into place.

STEP 5 : LOCKING 1

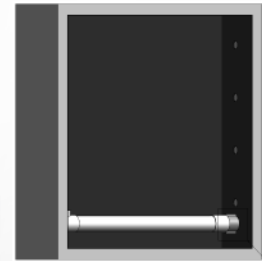


DETAIL C
SCALE 2:1

Step 5: Back Mount Installation on Cabinets

1. Identify the appropriate location on the cabinet where you want to mount the Rapid Lamp.


STEP 5.1 : LOCKING 2

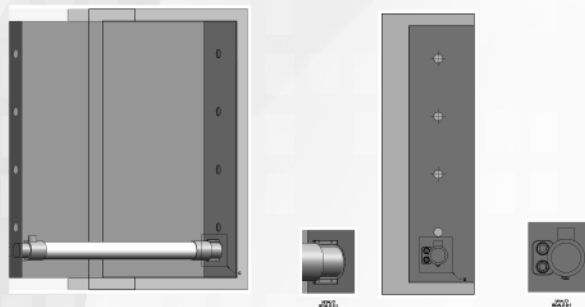

Step 5: Back Mount Installation on Cabinets

2. Position the male part of the Rapid Bracket against the cabinet wall.

STEP 5.2 : LOCKING 3

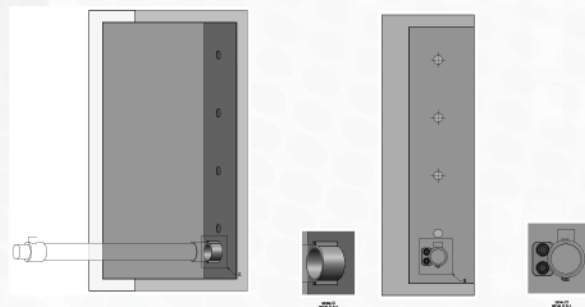


Step 5: Back Mount Installation on Cabinets

3. Using the provided screws, carefully attach the male bracket to the cabinet wall. Make sure it's securely fastened.




STEP 6 : ELECTRICAL CONNECTIONS

STEP 7 : COMPLETE ASM 1

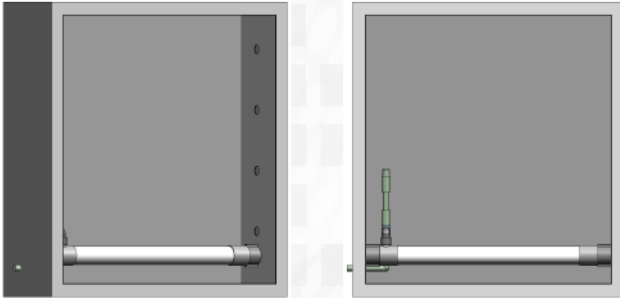



Step 6: Installing Rapid Lamp on Back Mount

1. Hold the Rapid Lamp at the correct angle to match the male-female bracket configuration on the back mount.
2. Slide the lamp's corresponding female bracket onto the male bracket that's attached to the cabinet wall. The lamp should smoothly slide into place.

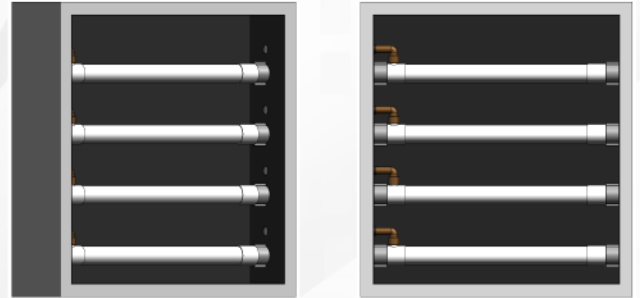

STEP 7 : COMPLETE ASM 2

CLAMP PATTERN ASSEMBLY

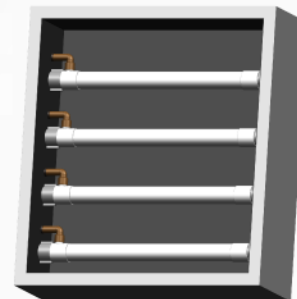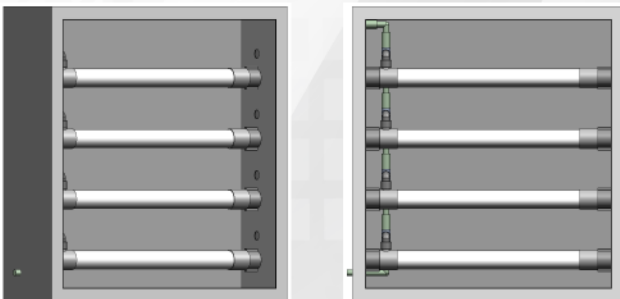

Step 7: Wiring and Power

1. Follow the manufacturer's instructions for wiring the Rapid Lamps, connecting them to the appropriate power source according to your electrical setup.


Step 8: Final Checks

1. Ensure that all brackets and lamps are securely attached and properly aligned.
2. Double-check the wiring connections to ensure they are correct and safe.
3. Test the Rapid Lamps to make sure they are functioning as expected.

Remember that this is a general guideline, and you should always refer to the specific scenario while installation.



RAPIDBRACKET®

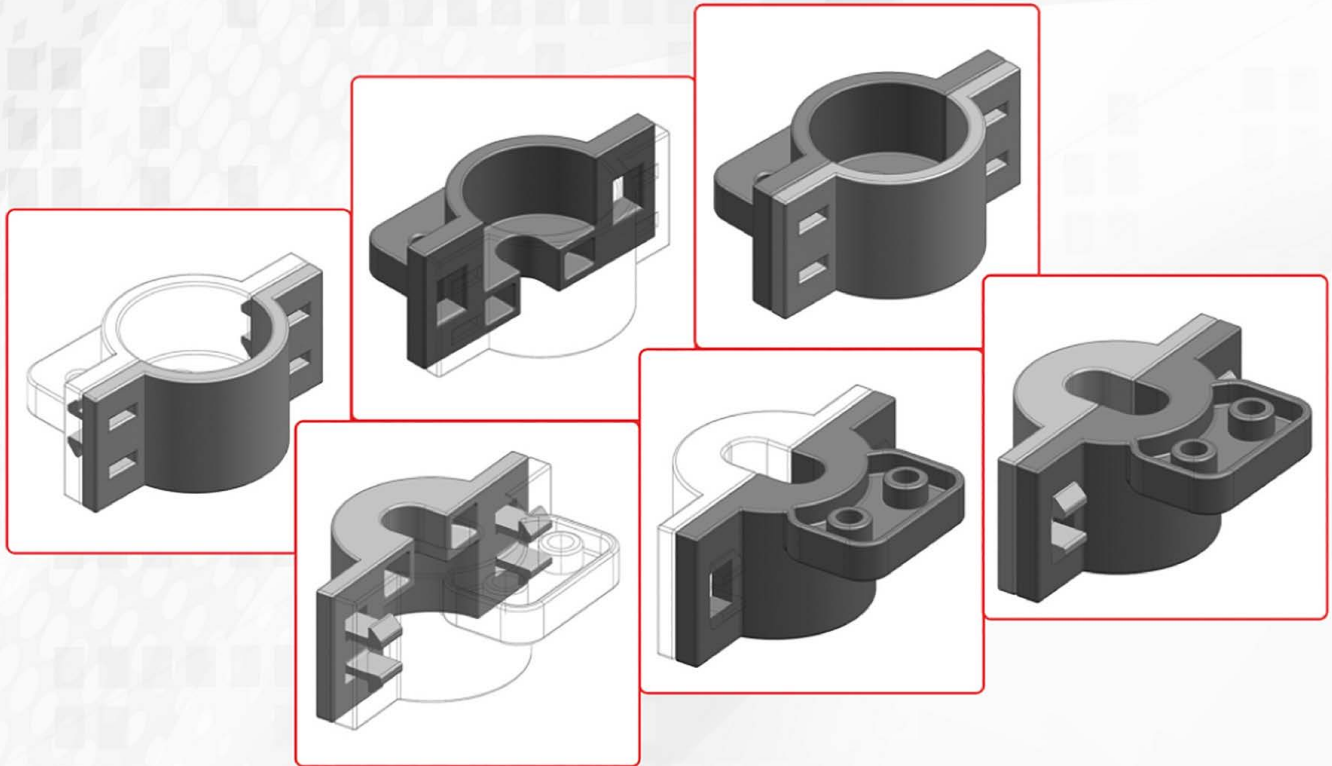

PH : 864-372-2378

E-Mail : info@signlightled.com

111 Preamble Ct, Anderson, SC 29621.



info@signlightled.com



www.signlightled.com